

# DuPont™ Kalrez® 7075UP

For Semiconductor Metal CVD Applications

Technical Information – March, 2017

## Product Description

DuPont™ Kalrez® 7075UP perfluoroelastomer parts are a black product targeted specifically metal CVD applications. It offers outstanding thermal stability, very low outgassing and excellent compression set properties. Kalrez® 7075UP exhibits excellent seal force retention, has good mechanical properties and is well suited for both static and dynamic sealing applications. A maximum application temperature of 327°C (620°F) is suggested. Short excursions to higher temperatures may also be possible. Ultrapure post-cleaning and packaging is standard for all parts made from Kalrez® 7075UP.

## Performance Features/Benefits

- Outstanding thermal stability
- Very low outgassing
- Excellent resistance to CIF<sub>3</sub>
- Excellent (low) compression set properties
- Excellent seal force retention properties
- Excellent response to temperature cycling effects

## Typical Physical Properties<sup>1</sup>

Color	Black
Hardness, Shore A (pellet) <sup>2</sup>	75
Hardness, Shore M (O-ring) <sup>3</sup>	85
100% Modulus <sup>4</sup> , MPa (psi)	10.54 (1529)
Tensile Strength at Break <sup>4</sup> , MPa (psi)	17.26 (2503)
Elongation at Break <sup>4</sup> , %	148
Compression Set <sup>5</sup> , %	
70 hr. at 204 °C (400°F)	15
70 hr. at 300 °C (572°F)	19
70 hr. at 325 °C (617°F)	34
Max. Application Temperature <sup>6</sup> , °C (°F)	327 (620)

<sup>1</sup> Not to be used for specifications

<sup>2</sup> ASTM D2240 (pellet test specimens)

<sup>3</sup> ASTM D2240 and ASTM D1414 (AS568 K214 O-ring test specimens)


<sup>4</sup> ASTM D412 (dumbbell test specimens)

<sup>5</sup> ASTM D395B and ASTM D1414 (AS568 K214 O-ring test specimens)

<sup>6</sup> DuPont proprietary test method


## Compression Set/Seal Force Retention

Figure 1. Compression Set at 204°C (400°F) \*

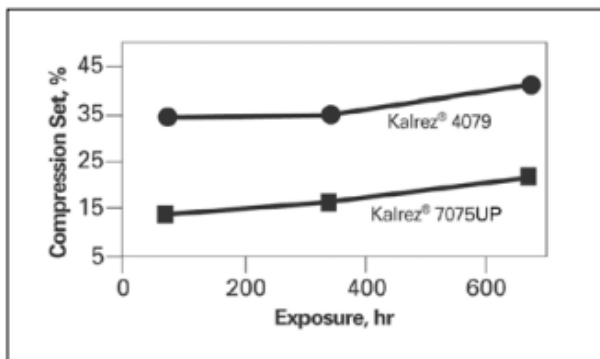

\*ASTM D395B & D1414 (AS568 K214 O-ring test specimens)

Figure 2. Seal Force Retention at 200°C (400°F)

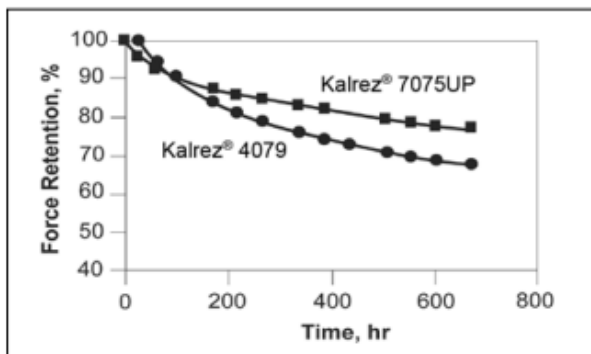

\* ISO 3384, Method A, (AS568 K214 O-ring specimens)



The miracles of science™

AUTHORIZED DISTRIBUTOR

DuPont™ Kalrez®  
PERFLUOROELASTOMER PARTS


"Ask for the Seal You Can Trust"

VARISCO & CO

## Outgassing

High heat and temperature spikes can degrade elastomeric seals causing their crosslinking structure to become irreversibly damaged. In addition elastomeric seals can degrade under high temperatures causing outgassing to occur, thereby contaminating the process environment. The result is unscheduled downtime, or even worse, product loss. Figure 3 shows the outgassing properties of Kalrez® 7075UP versus Kalrez® 8475, Competitive FFKM D8 and a typical FKM product. Kalrez® 7075UP exhibited the lowest total outgassing rate.

Figure 3. Total Outgassing Rate versus Temperature\*

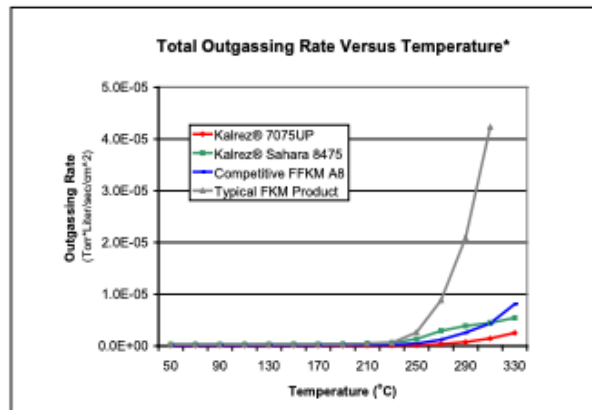

\*DuPont proprietary test method

Visit us at [kalrez.dupont.com](http://kalrez.dupont.com) or [vespel.dupont.com](http://vespel.dupont.com)

Contact DuPont at the following regional locations:

**North America**  
800-222-8377

**Latin America**  
+0800 17 17 15

**Europe, Middle East, Africa**  
+41 22 717 51 11

**Greater China**  
+86-400-8851-888

**ASEAN**  
+65-6586-3688

**Japan**  
+81-3-5521-8484

The information provided in this data sheet corresponds to our knowledge on the subject at the date of its publication. This information may be subject to revision as new knowledge and experience becomes available. The data provided fall within the normal range of product properties and relate only to the specific material designated; these data may not be valid for such material used in combination with any other materials, additives or pigments or in any process, unless expressly indicated otherwise.

The data provided should not be used to establish specification limits or used alone as the basis of design; they are not intended to substitute for any testing you may need to conduct to determine for yourself the suitability of a specific material for your particular purposes. Since DuPont cannot anticipate all variations in actual end-use and disposal conditions, DuPont does not guarantee favorable results, makes no warranties and assumes no liability in connection with any use of this information. All such information is given and accepted at the buyer's risk. It is intended for use by persons having technical skill, at their own discretion and risk. Nothing in this publication is to be considered as a license to operate under or a recommendation to infringe any patent. DuPont advises you to seek independent counsel for a freedom to practice opinion on the intended application or end-use of our products.

**CAUTION:** Do not use DuPont materials in medical applications involving implantation in the human body or contact with internal body fluids or tissues unless the material has been provided from DuPont under a written contract that is consistent with DuPont policy regarding medical applications and expressly acknowledges the contemplated use. For further information, please contact your DuPont representative. You may also request a copy of DuPont POLICY Regarding Medical Applications and DuPont CAUTION Regarding Medical Application.

Copyright © 2014 DuPont. The DuPont Oval Logo, DuPont™, The miracles of science™, Kalrez®, and Vespel® are trademarks or registered trademarks of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

(03/13) Reference No. KZE-A11073-00-C0518



The miracles of science™

AUTHORIZED DISTRIBUTOR

DuPont™ Kalrez®  
PERFLUOROELASTOMER PARTS

"Ask for the Seal You Can Trust"

VARISCO & CO