

DuPont™ Kalrez® PV8070

For Photovoltaic Manufacturing Processes

Technical Information — Rev. 2, July 2010

Product Description

DuPont™ Kalrez® PV8070 perfluoroelastomer parts are a black product for PV cell manufacturing processes requiring high temperature resistance including doping for n-type layer formation (bulk c-Si), diffusion for diselenide thermal implantation (CGIS) and TCS-based thermal CVD for poly-silicon feedstock production. It exhibits outstanding thermal stability and has excellent (low) compression set and outgassing properties. It also offers excellent resistance to both chlorine and fluorine gas as well as other dry process chemistry. Kalrez® PV8070 perfluoroelastomer parts have excellent mechanical strength properties and are well suited for both static and dynamic sealing applications. A maximum continuous service temperature of 325 °C is suggested. Short excursions to higher temperatures may also be possible.

Features/Benefits

- Outstanding thermal stability
- Excellent (low) compression set and outgassing properties
- Excellent resistance to dry process chemistry
- Excellent mechanical strength properties

Suggested Applications

- Chamber lid and door seals
- Center ring seals and fittings
- Isolation valve seals
- Quartz tube seals
- Substrate handling pads

Typical Physical Properties ¹	Kalrez® PV8070
Color	Black
Hardness ² , Shore M (O-ring)	83
Maximum continuous service temperature ³ , °C	325
Compression Set ⁴ , %	
70 hrs at 204 °C	9
70 hrs at 300 °C	32


¹ Not to be used for specification purpose

² ASTM D2240 and ASTM D1414 (AS568 K214 O-ring test specimens)

³ DuPont proprietary test method

⁴ ASTM D395B and ASTM D1414 (AS568 K214 O-ring test specimens)

Figure 1.

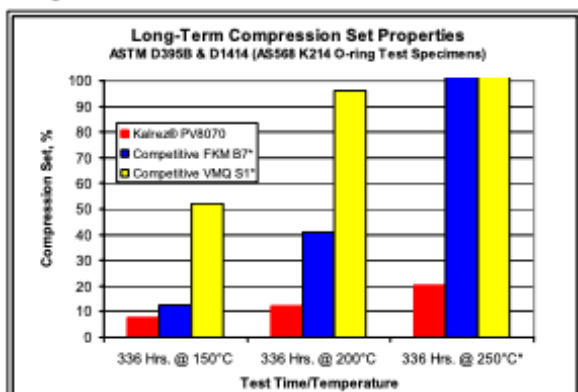

* Competitive FKM B7 and competitive VMQ S1 O-ring test specimens broke apart after 336 hr at 250 °C.

Compression Set

Compression set is routinely used to compare relative sealing performance, particularly at elevated temperatures. However, in many cases, short-term (70 hour) test data is used which is not indicative of long-term sealing performance. Figure 1 shows the long-term compression properties of DuPont™ Kalrez® PV8070 versus a typical fluoroelastomer (competitive FKM B7) and silicone (competitive VMQ S1) product. Kalrez® PV8070 exhibited excellent (low) compression set properties.



The miracles of science™

AUTHORIZED DISTRIBUTOR


DuPont™ Kalrez® PERFLUOROELASTOMER PARTS

DU PONT

"Ask for the Seal You Can Trust"

VARISCO & CO

Figure 2.

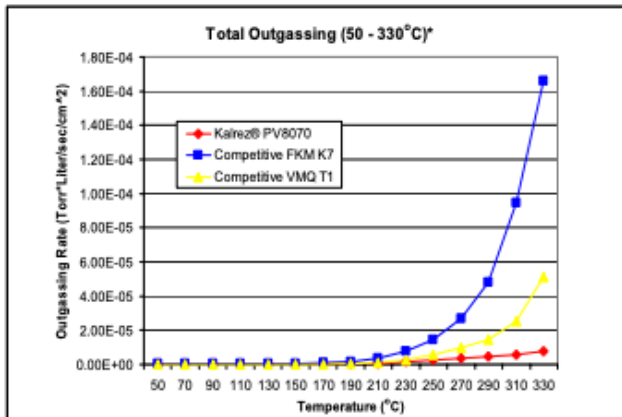

* Testing performed per DuPont proprietary test method.

Outgassing

High heat and temperature spikes can degrade elastomeric seals causing their crosslinking structure to become irreversibly damaged. In addition, elastomeric seals can degrade under high temperatures causing outgassing to occur, thereby contaminating the process environment. The result is unscheduled downtime, or even worse, product loss. Figure 2 shows the outgassing properties of Kalrez® PV8070 versus a typical fluoroelastomer (competitive FKM K7) and silicone (competitive VMQ T1) product. Kalrez® PV8070 exhibited excellent (low) outgassing properties.

Visit us at kalrez.dupont.com or vespel.dupont.com

Contact DuPont at the following regional locations:

North America
800-222-8377

Latin America
+0800 17 17 15

Europe, Middle East, Africa
+41 22 717 51 11

Greater China
+86-400-8851-888

ASEAN
+65-6586-3688

Japan
+81-3-5521-8484

The information provided in this data sheet corresponds to our knowledge on the subject at the date of its publication. This information may be subject to revision as new knowledge and experience becomes available. The data provided fall within the normal range of product properties and relate only to the specific material designated; these data may not be valid for such material used in combination with any other materials, additives or pigments or in any process, unless expressly indicated otherwise.

The data provided should not be used to establish specification limits or used alone as the basis of design; they are not intended to substitute for any testing you may need to conduct to determine for yourself the suitability of a specific material for your particular purposes. Since DuPont cannot anticipate all variations in actual end-use and disposal conditions, DuPont does not guarantee favorable results, makes no warranties and assumes no liability in connection with any use of this information. All such information is given and accepted at the buyer's risk. It is intended for use by persons having technical skill, at their own discretion and risk. Nothing in this publication is to be considered as a license to operate under or a recommendation to infringe any patent. DuPont advises you to seek independent counsel for a freedom to practice opinion on the intended application or end-use of our products.

CAUTION: Do not use DuPont materials in medical applications involving implantation in the human body or contact with internal body fluids or tissues unless the material has been provided from DuPont under a written contract that is consistent with DuPont policy regarding medical applications and expressly acknowledges the contemplated use. For further information, please contact your DuPont representative. You may also request a copy of DuPont POLICY Regarding Medical Applications and DuPont CAUTION Regarding Medical Application.

Copyright © 2014 DuPont. The DuPont Oval Logo, DuPont™, The miracles of science™, Kalrez®, and Vespel® are trademarks or registered trademarks of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

(03/13) Reference No. KZE-A11073-00-C0518



The miracles of science™



VARISCO & CO