

DuPont™ Kalrez® 9100

For Photovoltaic Manufacturing Processes

Technical Information — Rev. 1, July 2010

Product Description

DuPont™ Kalrez® 9100 perfluoroelastomers parts are an amber translucent product for PV cell manufacturing processes requiring resistance to fluorine-based plasma including amorphous/microcrystalline silicon thin film deposition. It exhibits very low weight loss and ultra-low particle generation in fluorine-based plasma, e.g., NF_3 , F_2 , etc. It also offers excellent resistance to dry process chemistry and has excellent thermal stability, compression set and outgassing properties. Kalrez® 9100 has good mechanical strength properties and is well suited for both static and dynamic sealing applications. A maximum continuous service temperature of 300 °C is suggested.

Features/Benefits

- Very low weight loss and ultra-low particle generation in fluorine-based plasma
- Excellent resistance to dry process chemistry
- Excellent thermal stability
- Excellent (low) compression set and outgassing properties

Typical Physical Properties¹

Typical Physical Properties ¹	Kalrez® 9100
Color	Amber Translucent
Hardness ² , Shore M (O-ring)	74
Maximum continuous service temperature ³ , °C	300
Compression Set ⁴ , % 70 hr at 204 °C	17

Suggested Applications


- Gas valve/slit valve door seals
- Gas inlet/orifice seals
- Isolation valve seals
- Substrate handling pads
- Chamber lid seals

¹ Not to be used for specification purposes

² ASTM D2240 and ASTM D1414 (AS568 K214 O-ring test specimens)

³ DuPont proprietary test method

⁴ ASTM D395B and ASTM D1414 (AS568 K214 O-ring test specimens)

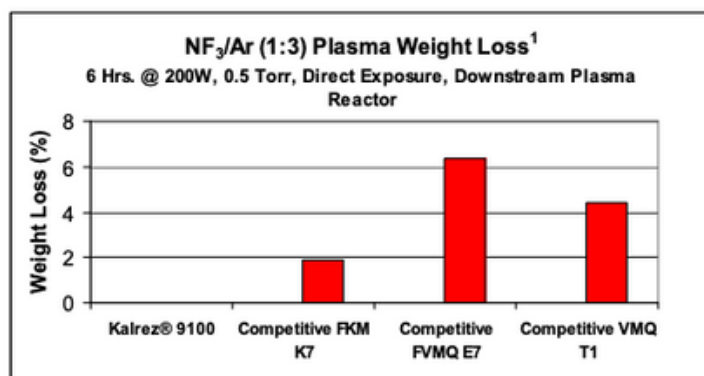

¹ DuPont proprietary test method

Plasma Resistance

Plasma can be a very aggressive media depending upon the power and chemistry employed. If not selected properly, elastomers can be eroded at an astonishing rate in plasma, leading to problems during pump-down or causing toxic gases to be released into the atmosphere. Figure 1 shows the % weight loss (erosion) properties of Kalrez® 9100 versus a typical fluoroelastomer (competitive FKM K7), fluorosilicone (competitive FVMQ E7) and silicone (competitive VMQ T1) product after direct exposure to NF_3/Ar (1:3) plasma for 6 hours. Kalrez® 9100 exhibited significantly lower weight loss (erosion) versus the other products tested.



The miracles of science™


AUTHORIZED DISTRIBUTOR

DuPont™ Kalrez®
PERFLUOROELASTOMER PARTS

"Ask for the Seal You Can Trust"

VARISCO & CO

Figure 2.

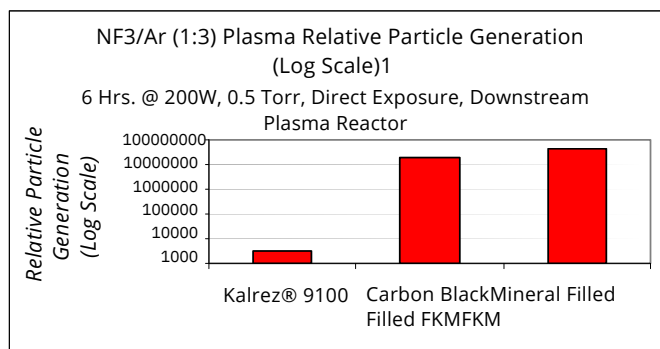

¹DuPont proprietary test method

Particle Generation

Conventional sealing materials normally contain carbon black and/or mineral fillers. Newer products are either unfilled or formulated with polymeric fillers. Plasma resistance can be significantly different depending upon the type of filler used. If the filler has high resistance to plasma, it can “shield” the polymer to reduce erosion or weight loss but have high potential for particle generation by leaving discrete particles behind once the polymer has become etched. Unfilled and polymeric filled products can be completely etched to form volatiles, thereby significantly reducing the potential for contamination. Figure 2 illustrates the relative particle generation of DuPont™ Kalrez® 9100 versus typical carbon black and mineral filled fluoroelastomer products after exposure to NF3/Ar (1:3) plasma for 6 hours. Kalrez® 9100 exhibited significantly lower particle generation versus the other products tested.

Contact DuPont at the following regional locations:

Visit us at kalrez.dupont.com or vespel.dupont.com

North America
800-222-8377
Greater China
+86-400-8851-888

Latin America
+0800 17 17 15
ASEAN
+65-6586-3688

Europe, Middle East, Africa
+41 22 717 51 11
Japan
+81-3-5521-8484

The information set forth herein is furnished free of charge and is based on technical data that DuPont believes to be reliable and falls within the normal range of properties. It is intended for use by persons having technical skill, at their own discretion and risk. This data should not be used to establish specification limits nor used alone as the basis of design. Handling precaution information is given with the understanding that those using it will satisfy themselves that their particular conditions of use present no health or safety hazards. Since conditions of product use and disposal are outside our control, we make no warranties, express or implied, and assume no liability in connection with any use of this information. As with any product, evaluation under end-use conditions prior to specification is essential. Nothing herein is to be taken as a license to operate or a recommendation to infringe on patents.

Caution: Do not use in medical applications involving permanent implantation in the human body. For other medical applications, discuss with your DuPont customer service representative and read Medical Caution Statement H-50103-3.

Copyright © 2010 DuPont. The DuPont Oval Logo, DuPont™, The miracles of science™, Kalrez®, and Vespel® are trademarks or registered trademarks of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

(07/09) Reference No. KZE-A10810-00-B0710

