

DuPont™ Kalrez® Spectrum™ 7090

Technical Information — Rev. 1, July 2010

Product Description

DuPont™ Kalrez® Spectrum™ 7090 perfluoroelastomer parts are specifically targeted for use in applications requiring high hardness/higher modulus properties. These specialty black parts have excellent mechanical properties including compression set resistance, seal force retention, response to temperature cycling effects and rapid gas decompression resistance. Kalrez® Spectrum™ 7090 perfluoroelastomer parts are well suited for both static and dynamic sealing applications, especially applications that require extrusion resistance at higher temperatures. They also offer outstanding thermal stability and chemical resistance. A maximum continuous service temperature of 325 °C (617 °F) is suggested. Short excursions to higher temperatures may also be possible.

Typical Physical Properties¹

Color	Black
Hardness, Shore A ²	90
50% Modulus ³ , MPa (psi)	15.51 (2250)
Tensile Strength at Break ³ , MPa (psi)	22.75 (3300)
Elongation at Break ³ , %	75
Compression Set ⁴ , %	
70 hr at 204 °C	12
70 hr at 260 °C	23
Temperature of Retraction, Tr10 ⁵ , °C (°F)	-5 (23)
Maximum Continuous Service Temperature ⁶ , °C (°F)	325 (617)

¹ Not to be used for specification purposes

² ASTM D2240 (pellet test specimens)

³ ASTM D1414 and D412 (AS568 K214 O-ring test specimens)

⁴ ASTM D1414 and D395B (AS568 K214 O-ring test specimens)

⁵ ASTM D1329 (dumbbell test specimens/test specimens stretched 25%)

⁶ DuPont proprietary test method

Performance Features/Benefits

- Higher hardness and modulus
- Exceptional thermal stability and compression set resistance
- Outstanding seal force retention properties and response to temperature cycling effects
- Excellent mechanical properties
- Lower coefficient of thermal expansion (CTE) versus other Kalrez® parts thus minimizing the need to increase the free volume of the seal gland when upgrading from fluoroelastomers (FKM) to perfluoroelastomers (FFKM)




The miracles of science™



VARISCO & CO

Long-Term Compression Set in Hot Air¹

672 hour at 260 °C (500 °F)

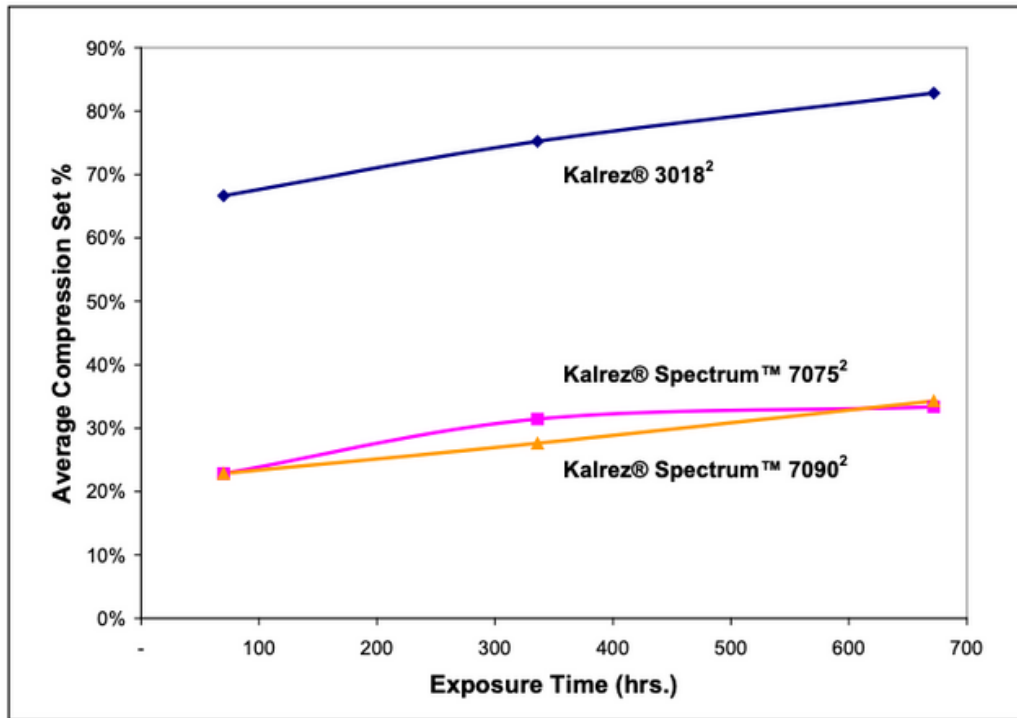

¹ Not to be used for specification purposes

² ASTM D1414 and D395B (AS568 K214 O-ring test specimens)

Visit us at kalrez.dupont.com or vespel.dupont.com

Contact DuPont at the following regional locations:

North America
800-222-8377

Latin America
+0800 17 17 15

Europe, Middle East, Africa
+41 22 717 51 11

Greater China
+86-400-8851-888

ASEAN
+65-6586-3688

Japan
+81-3-5521-8484

The information provided in this data sheet corresponds to our knowledge on the subject at the date of its publication. This information may be subject to revision as new knowledge and experience becomes available. The data provided fall within the normal range of product properties and relate only to the specific material designated; these data may not be valid for such material used in combination with any other materials, additives or pigments or in any process, unless expressly indicated otherwise.

The data provided should not be used to establish specification limits or used alone as the basis of design; they are not intended to substitute for any testing you may need to conduct to determine for yourself the suitability of a specific material for your particular purposes. Since DuPont cannot anticipate all variations in actual end-use and disposal conditions, DuPont does not guarantee favorable results, makes no warranties and assumes no liability in connection with any use of this information. All such information is given and accepted at the buyer's risk. It is intended for use by persons having technical skill, at their own discretion and risk. Nothing in this publication is to be considered as a license to operate under or a recommendation to infringe any patent. DuPont advises you to seek independent counsel for a freedom to practice opinion on the intended application or end-use of our products.

CAUTION: Do not use DuPont materials in medical applications involving implantation in the human body or contact with internal body fluids or tissues unless the material has been provided from DuPont under a written contract that is consistent with DuPont policy regarding medical applications and expressly acknowledges the contemplated use. For further information, please contact your DuPont representative. You may also request a copy of DuPont POLICY Regarding Medical Applications and DuPont CAUTION Regarding Medical Application.

Copyright © 2014 DuPont. The DuPont Oval Logo, DuPont™, The miracles of science™, Kalrez®, and Vespel® are trademarks or registered trademarks of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

(03/13) Reference No. KZE-A11073-00-C0518



The miracles of science™

AUTHORIZED DISTRIBUTOR

DuPont™ Kalrez®
PERFLUOROELASTOMER PARTS

"Ask for the Seal You Can Trust"

VARISCO & CO